

STEICO *multi tape black*

High performance tape with special surface

Sealing system for
STEICO insulation systems

Ideally suited for use with
STEICO *universal black*

Can be plastered over



High performance black tape with surface that can be directly plastered



Application area


Internal and external

Joint and connection bonding of STEICO wood fibre boards in combination with STEICO *multi primer*

Joint and connection bonding of STEICO *universal black*

Connection bonding for STEICO *fix* and STEICO *tri*

- Solvent-free
- High UV and ageing resistance
- High moisture resistance / rainproof
- Can be used indoors and in protected outdoor areas
- Can be processed from -10 °C (dry and ice-free substrate required)
- Temperature resistant between -40 and +100 °C

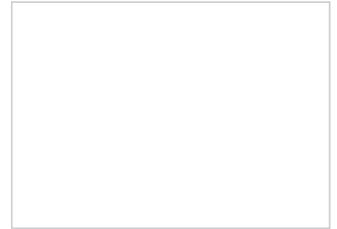

Delivery format STEICO*multi tape black*

Width [mm]	Roll length [m]	Slotted release paper [mm]
70	25	20/50
140	25	50/20/70

Notes: Protect from heat, cold and light; Store in a dry place at +5 to +25 °C

Technical Characteristics STEICO*multi tape black*

Adhesive	Acrylate dispersion, solvent-free
Adhesive backing	UV stabilised special coating, single-sided adhesion
Colour	Black, without printing
Thickness (without covering) [mm]	Approx. 0.6
Temperature range [°C]	-40 to +100
UV-resistance	6 months (before cladding is applied)
Processing temperature [°C]	> -10; Substrate must be dry and free of ice
Minimum roof pitch [°]	10
s _d value [m]	1.5

Installation

- Substrates should be stable, dry and free of dust and grease.
- Align STEICO*multi tape black*, gradually remove the release paper and firmly rub the tape.
- Slotted release paper eases corner adhesion by enabling the removal of only a single liner.
- Apply STEICO*multi tape black* smoothly without tension or wrinkles. If tension forces are present, reinforce the substrate with additional mechanical fastening.
- Avoid applying tape in standing water. Application in Sauna or Swimming Pool areas is not permitted.

Installation with STEICO wood fibre boards

- STEICO wood fibre boards should be pre-treated in taping areas with STEICO*multi primer*.
- After sufficient drying time (when the primer is transparent), apply STEICO*multi tape black* in 70 or 140mm width, remove the release paper, and rub firmly.
- The adhesive area on the wood fibre board must be at least 50 mm.
- For better adhesion use a lacquer roller or regular roller to apply additional pressure.